

## Limited Scale Warranty

Globe Food Equipment Company ("GFE") warrants to the original purchaser of new equipment that said equipment, when installed in accordance with our instructions within the United States and subject to normal use, is free from defects in material or workmanship for a period of one year (excludes wear/expandable parts) from purchase date. Contact factory for warranty procedures if scale failure occurs.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESSED OR IMPLIED. GFE EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTABILITY OR EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

GFE'S OBLIGATION AND LIABILITY UNDER THIS WARRANTY IS EXPRESSLY LIMITED TO REPAIRING OR REPLACING EQUIPMENT WHICH PROVES TO BE DEFECTIVE IN MATERIAL OR WORKMANSHIP WITHIN THE APPLICABLE WARRANTY PERIOD. All repairs pursuant to this

Warranty will be performed by an Authorized Designated GFE Service Location during normal working hours. IN NO EVENT SHALL GFE BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES TO BUYER OR ANY THIRD PARTY, INCLUDING, WITHOUT LIMITATION, LOSS OF PROPERTY, PERSONAL INJURY, LOSS OF BUSINESS OR PROFITS OR OTHER ECONOMIC LOSSES, OR STATUTORY OR EXEMPLARY DAMAGES, WHETHER IN NEGLIGENCE, WARRANTY, STRICT LIABILITY, OR OTHERWISE.

This warranty is given only to the first purchaser from a retail dealer. No warranty is given to subsequent transferees.

Periodic maintenance of equipment including but not limited to weight checks or recalibration, damage to load cell, lost parts, misuse and abuse, adjustments, water damage, improper installation, and normal wear are not covered under this warranty.

This warranty is not in force until such time as an online registration form has been received by GFE within 30 days from the date of installation. Register at [www.globeslicers.com/warranty.asp](http://www.globeslicers.com/warranty.asp).

THE FOREGOING WARRANTY PROVISIONS ARE A COMPLETE AND EXCLUSIVE STATEMENT BETWEEN THE BUYER AND SELLER. GFE NEITHER ASSUMES NOR AUTHORIZES ANY PERSONS TO ASSUME FOR IT ANY OTHER OBLIGATION OR LIABILITY IN CONNECTION WITH SAID EQUIPMENT.

Visit our website to register your product  
[WWW.GLOBESLICERS.COM](http://WWW.GLOBESLICERS.COM)



Serial #: \_\_\_\_\_

**\*NOT LEGAL FOR TRADE**

## Instruction Manual for Globe Portion Control Scale Model GPS10

Visit our website for information on additional products available from Globe.

GLOBE FOOD EQUIPMENT CO.  
2153 DRYDEN RD.  
DAYTON, OH 45439  
PHONE: 937-299-5493  
TOLL FREE: 800-347-5423  
FAX: 937-299-8623

[www.globeslicers.com](http://www.globeslicers.com)

*Slicers, Mixers, Countertop Cooking Equipment, Meat Choppers & Scales*

### - IMPORTANT SAFETY NOTICE -

This manual contains important safety instructions which must be strictly followed when using this equipment.

© Globe Food Equipment Company, 2011  
Printed in the U.S.A. 5-2011

## Safety Tips

This manual contains a number of precautions to follow in order to help promote safe use of this equipment.

**Warnings affecting your personal safety are indicated by:**

### CAUTION

**Warnings related to possible damage to the equipment are indicated by:**

### WARNING

To ensure proper and safe operation, the general safety tips below must be followed.

- **DO NOT** disassemble the scale.
- **ONLY** trained and qualified service personnel should attempt repairs.
- **DO NOT** drop or apply a strong shock to the scale.
- **DO NOT** leave any items on the weighing platter. This can damage the scale.
- **NEVER** immerse the scale in water.
- **DO NOT** put the scale in a dishwasher.

## Installation

1. Place the scale on a stable flat surface.
2. Get power to the unit by...
  - a. Installing Batteries – Open the lid on the bottom of the scale and install three C-batteries. **NOTE:** Batteries are not included with the scale.
  - b. Or connect the AC Adaptor to the receptacle located on the right side of the scale and plug into an electrical outlet.
3. Place the stainless steel weighing platter over the top portion of the scale.
4. Adjust the feet of the scale until the level's air bubble remains in the center of the circle (located on the front of the scale).

## Operating Instructions

1. Make sure nothing is on or touching the weighing platter.
2. Turn the unit on by pressing the On/Off key. The scale display will initially show all 8's and after three seconds the display will show 0's. **NOTE:** A "Lo" warning will appear on the display when the battery power is insufficient.

## Operating Instructions

3. The scale weighs in pounds (lb), ounces (oz), kilograms (kg), and grams (g) mode. Press the Units key to switch between weighing modes. An arrow will illuminate on the display screen next to the unit of measure selected.
4. The scale can weigh in Gross or Net modes.
  - a. If Net weighing is needed, place the empty container (or tare weight) on the weighing platter and press the Tare/Zero key.
  - b. The display will show zeros and an arrow will illuminate on the left of the display next to Tare.
  - c. When the empty container is removed from the weighing platter, the tare weight is shown as a negative amount and is indicated by an arrow on the display next to tare.
  - d. **NOTE:** When no tare weight is used, you are in the Gross weighing mode and there will be no arrow next to tare.
5. Place the product (including container if tare weight is being used) on the stainless steel weighing platter. The total weight is displayed.  
**NOTE:** If the weight of the object is over the maximum capacity, the display will show "----". Remove the object from the patter and reduce the weight of the object.
6. Remove the first product and continuing weighing the next item. If the tare weight needs to be changed for a new product, then press the Tare/Zero key again to set it to zero and repeat the steps above for Net weighing.
7. Press the On/Off key to turn the scale off. **NOTE:** The scale will automatically shut-off after 5 minutes of no activity whether it is operating on battery or AC power.

## Cleaning

### CAUTION

- **NEVER** place scale in sink or dishwasher.
  - **DO NOT** hose down or pressure wash any part of the scale.
  - **Excess moisture will damage scale and void warranty.**
1. If the scale is running on AC power, unplug the scale.
  2. Remove the stainless steel platter and wash with warm soapy water.
  3. Soak a clean cloth in a mild detergent and warm water solution. Ring out excess water from cloth. Clean and wipe down the entire scale. Use a mild, non-bleach, non-chlorine sanitizer if required. **Dilute sanitizer per supplier's instruction!**